

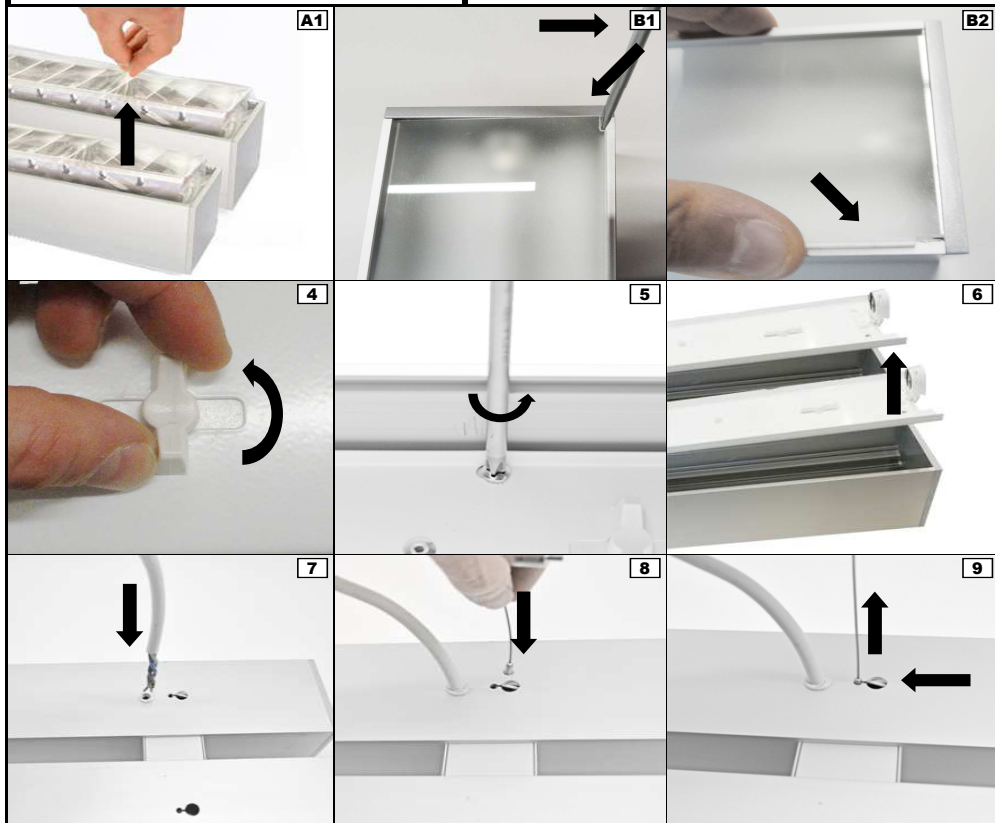


P - Instruções de montagem F - Instructions de montage E - Instrucciones de montaje
 GB - Installation instructions D - Montageanweisungen

Watt	C	L	A	F1
21/39	881	200	89	770
28/54	1181	200	89	1070
35/49/80	1481	200	89	1370

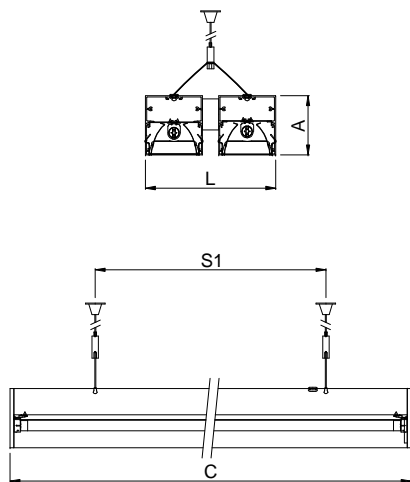



P - Instruções de montagem F - Instructions de montage E - Instrucciones de montaje
 GB - Installation instructions D - Montageanweisungen

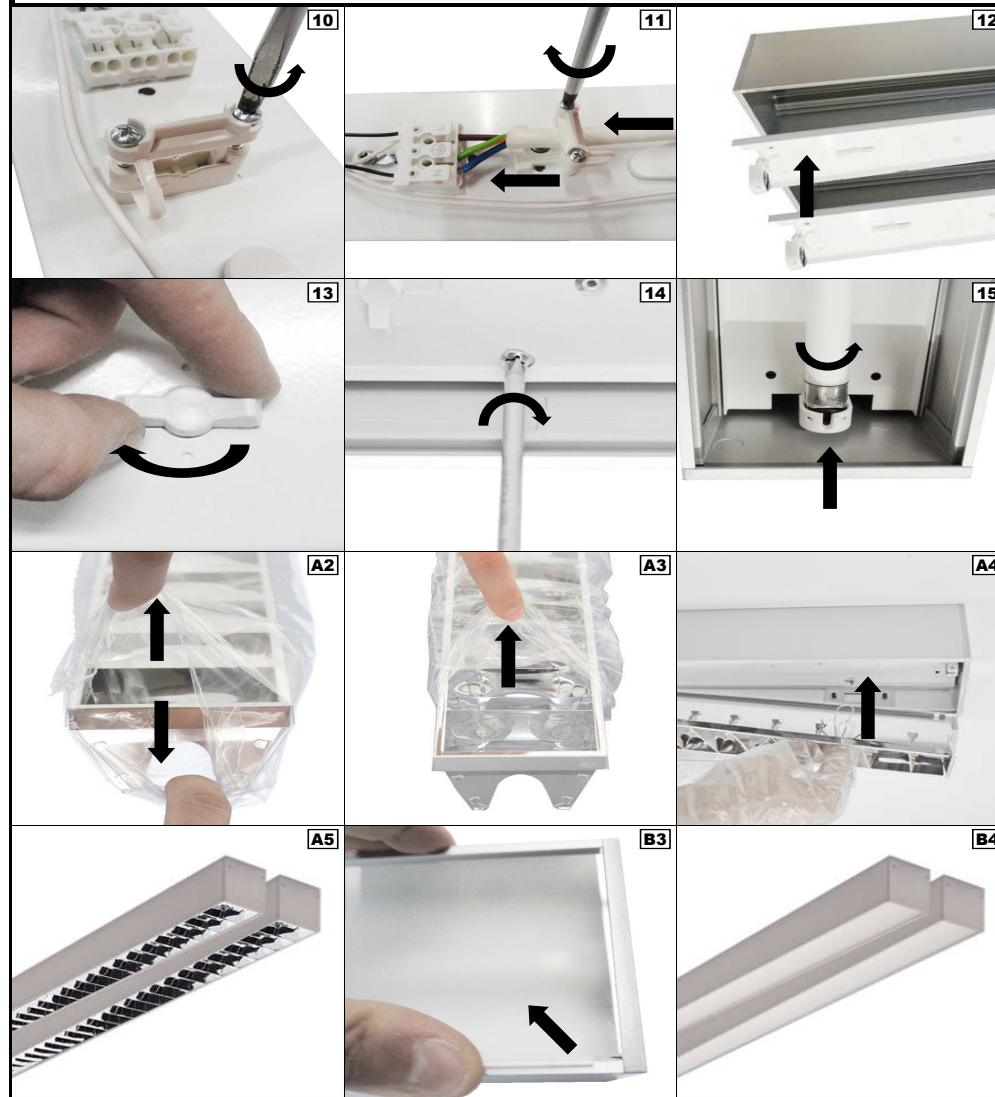


PT - Instalação apenas no teto.
 EN - Surface installation only for ceiling.
 FR - Installation seulement au plafond.
 ES - Instalación sólo en el techo.
 DE - Nur für Deckenmontage.

P - Instruções de montagem F - Instructions de montage E - Instrucciones de montaje
 GB - Installation instructions D - Montageanweisungen

Watt	C	L	A	F1
21/39	881	200	89	770
28/54	1181	200	89	1070
35/49/80	1481	200	89	1370

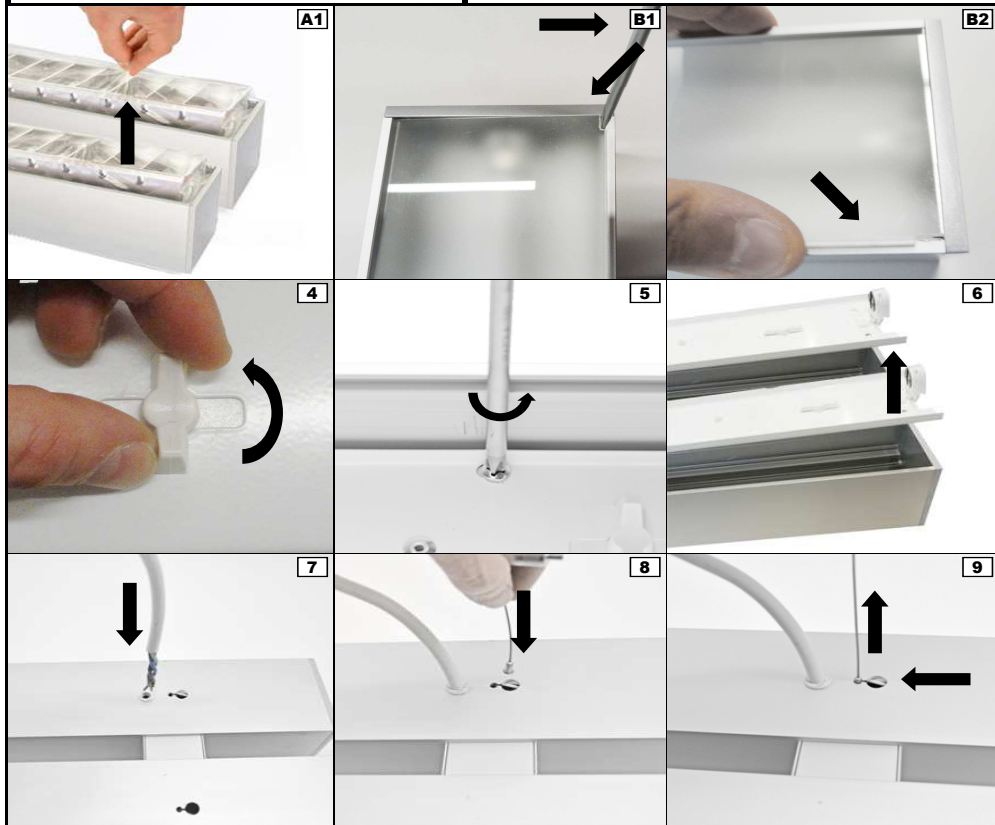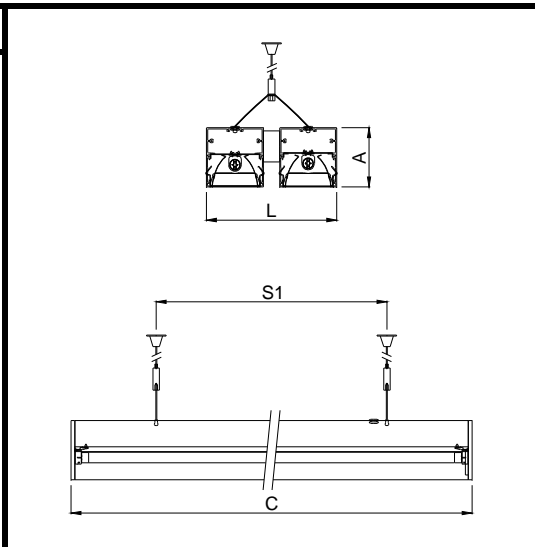

P - Instruções de montagem F - Instructions de montage E - Instrucciones de montaje
 GB - Installation instructions D - Montageanweisungen

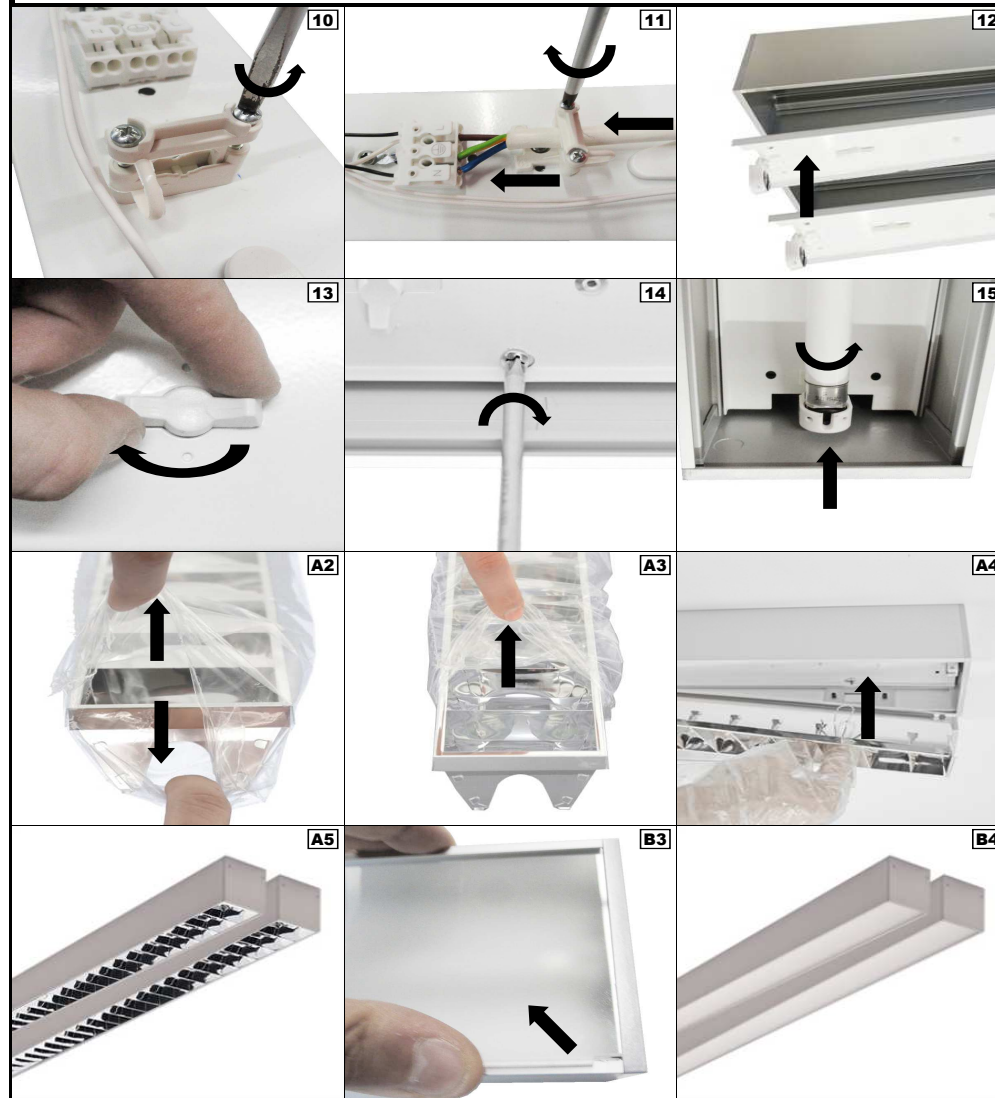

PT - Instalação apenas no teto.
 EN - Surface installation only for ceiling.
 FR - Installation seulement au plafond.
 ES - Instalación sólo en el techo.
 DE - Nur für Deckenmontage.